

AFTERCARE GUIDELINES



In order to prolong the life of your Zipscreen blind and provide optimum performance, we recommend the following care and maintenance guidelines.

REGULAR CLEANING (AT LEAST EVERY 3 MONTHS)

- Ensure surfaces are free from dirt, dust and grime.
- Clean Zipscreen blind with a soft brush.
- Run a soft brush along side channel to prevent dust and dirt build up on zip.
- Clean aluminium with a soft cloth and warm soapy water or a small amount of mild detergent if required. Do not use abrasive cleaning agents (eg. Ajax or steel wool) in any circumstance.

OPERATE THE ZIPSCREEN BLIND AT LEAST ONCE A WEEK TO PREVENT BUILD-UP OF DIRT THAT WILL INHIBIT THE OPERATION OF THE BLIND.



DO NOT:

- Do not leave the Zipscreen blind down when you are away from your home or in extreme weather conditions.
- Do not roll the Zipscreen blind up when wet (to avoid mould and mildew).
- Do not force the Zipscreen blind up or down if it is jamming. Forcing the Zipscreen blind may result in further damage (for example, the zip may be forced out of the side channel, or the fabric may rip). Contact your Zipscreen supplier for guidelines of how to fix.
- Do not operate spring controlled Zipscreen blinds from the sides - always use the Weight Bar or Handle and pull from the centre.

COMMON CHARACTERISTICS:

- Depending on the fabric selection, when the Zipscreen blind is initially pulled down some ripples may be evident. The ripples will lessen over time as the weight of the blind will stretch the fabric slightly and the ambient temperature will heat the fabric within an hour or so (depending on the weather).
 - When a motorised blind is operated some 'jolting' may be evident. This effect is due to wind gusts causing spontaneous friction between the zip and side guides. This occurrence does not damage the blind.
-

YOUR ZIPSCREEN SUPPLIER:
